

Operating instructions for powder extinguishing module MPH-5M

1. Remove the extinguishing module from the wall bracket



2. Unscrew the protective cap and drop it.



3. Pull the safety pin.



4. Quickly throw the extinguishing module towards the source of the fire and move away.



5. The extinguishing module triggers automatically after approximately 7 seconds.

